 


# Tuffer III Quick Start Guide



Zero Calibrate the scale with Empty Bucket. To start process Press button, Curl EMPTY bucket back + lift smoothly until weight is displayed



Create a New Job with the same data as the previous load



Create a New Job or load or Select or Change data



Activate / Deactivate target weight Mode



Delete / Subtract last lifted bucket weight from the Total



Delete / Subtract the Next lifted bucket weight from the Total



Activating / Deactivating the Truck & Trailer Function



System-Pause – Scale does not calculate and add weight to totals in this mode



Switch to the Job Selection Area. Active, Completed or a Template



Press OK to complete a load /job & start a new one. This will reset truck total.



If a printer is connected Clear Job / Load, with or without printing a ticket





- Active
  - Completed
  - Templates
- Job Lists

Current jobs that have not been completed. To continue with a job press to selected and continue

Completed jobs to view and print

Choose from templates by selecting



Creating a new template from an active or finished job



Edit an active job or template



Deleting an active job or template



Create a new template